



HOW TO INITIALLY SET UP

# Reolink 4G Cameras via Reolink App



## This article will guide you on how to initially set up Reolink 4G cameras via Reolink App.

**Applies to:** Reolink Go, Reolink Go PT, Reolink Go Plus, Go Series G330, Reolink Go PT Plus, Go Series G430, Reolink Go Ultra, Go Series G340, Reolink Go PT Ultra, Go Series G440, Reolink Go Ranger PT, Go Series G450, KEEN Ranger PT.

If you haven't acquired the App, scan the QR code shown below to download and install Reolink App on your iOS or Android phones.



# Step-by-Step Setup:

## 1. Install the SIM Card and Power Up

- Insert the SIM card and power on the camera. Wait for the voice prompt: “Network connection succeeded” to begin the setup. If you don’t hear it, reset the camera by following the provided instructions.
- If you have the **TrackMix Wired LTE**, you can connect it directly to the router and set it up as a wired camera.


**Note:** Ensure the power switch is on, except for Reolink Go, Go Plus, and Go Ultra.

## 2. Download the Reolink App

- If you haven’t installed the Reolink App yet, scan the QR code below to download and install it on your iOS or Android phone.

## 3. Add the Camera

Tap the icon **+** in the top right corner of the Reolink app to add the camera.

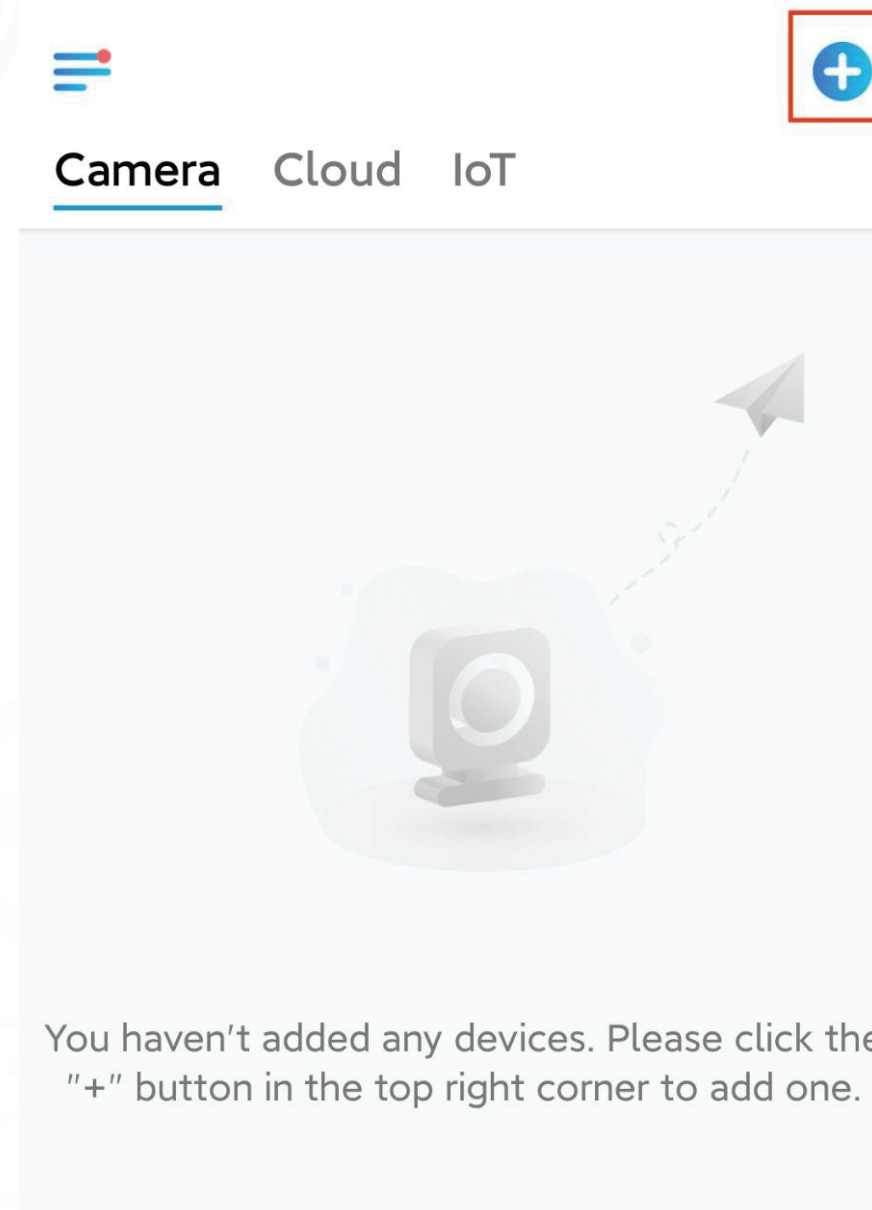

- 
- 
- 
- 
-

# Step-by-Step Setup:


## 4. Scan QR Code:

- Scan the QR code located on the back of the camera. If scanning doesn't work, tap **Input UID/IP** and enter the 16-digit UID under the QR code.

## 5. Set Up Login and Name

- Create a login password for the camera and give it a name, then tap **Next**.

Device initialization




UID | IP

A product UID is a unique identifier of a device, which can be used to add device or access device information.

Please enter the UID.

Next

Device initialization

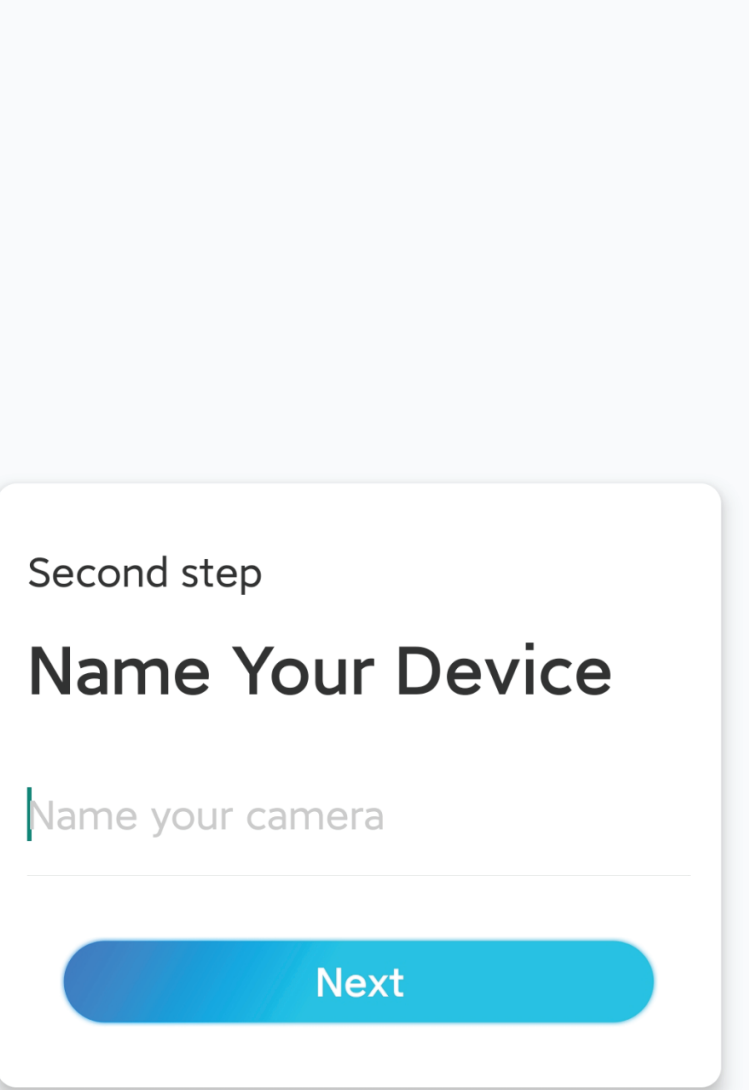

Device initialization


Second step

Name Your Device

Name your camera

Next

Device initialization

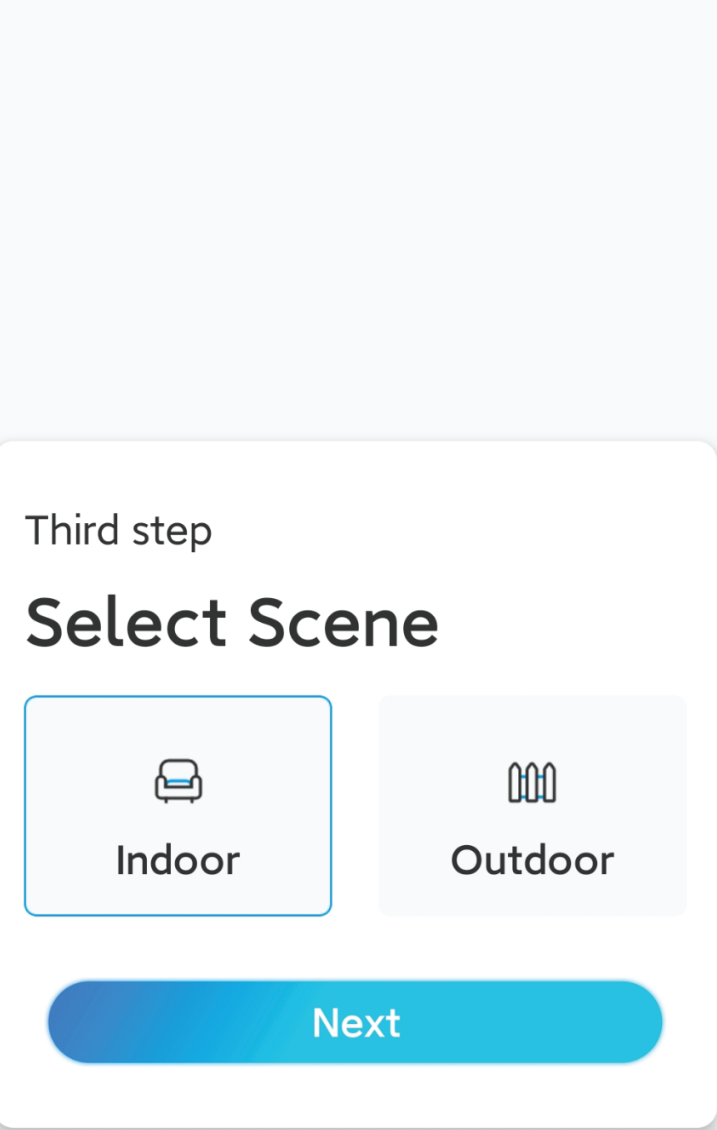

Device initialization

Third step

Select Scene


Indoor Outdoor

Next

# Step-by-Step Setup:

## 6. Select the Scene (Optional)


- Choose the appropriate scene based on where your camera will be installed, and tap **Next**.

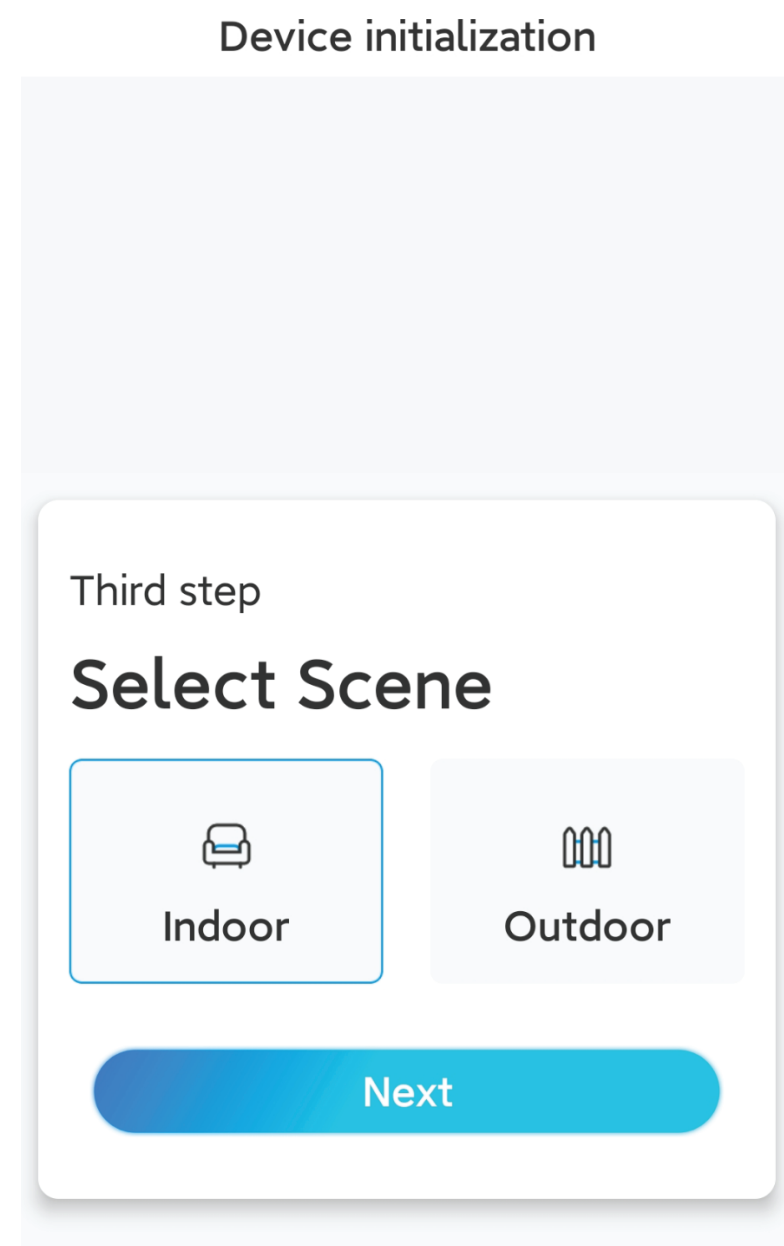

**Note:** Scene selection is available only for Reolink Go Plus, Go PT Plus, KEEN Ranger PT, and Duo 2 LTE models.

## 7. Complete Setup

- Read the final note and tap **Finish** to complete the initialization of your camera.

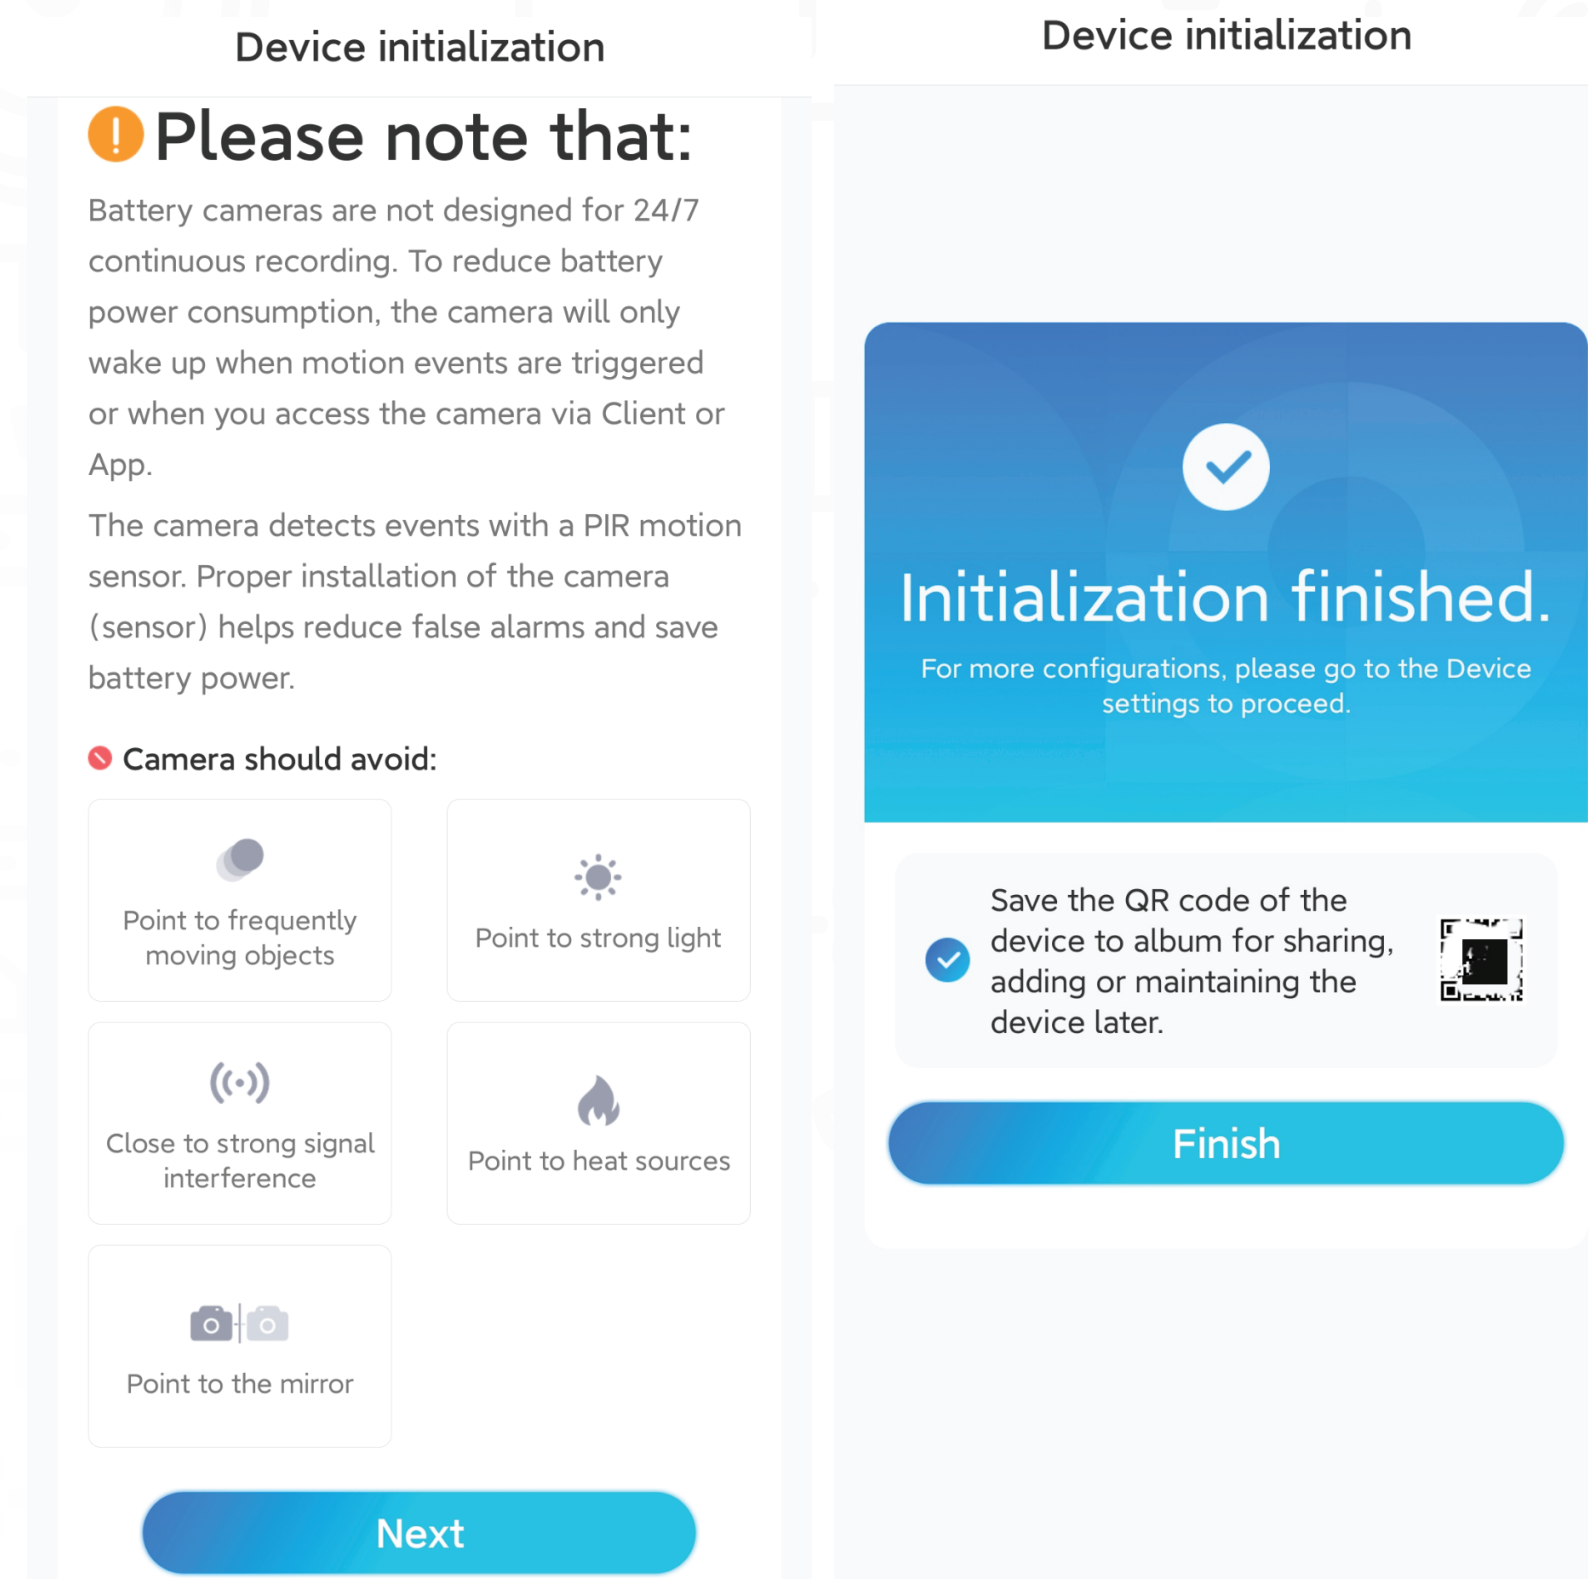



## HOW TO INITIALLY SET UP

# Reolink 4G Cameras via Reolink Client

**Applies to:** Reolink Go, Reolink Go PT, Reolink Go Plus, Go Series G330, Reolink Go PT Plus, Go Series G430, Reolink Go Ultra, Go Series G340, Reolink Go PT Ultra, Go Series G440, Reolink Go Ranger PT, Go Series G450



# Step-by-Step Setup:



## 1. Install the SIM Card and Power Up

- Choose an appropriate SIM card, install it into the camera, and power it on. Wait for the voice prompt: "Network connection succeeded." If you don't hear this, refer to the instructions for resetting your camera.
- If you have a **TrackMix Wired LTE**, connect it directly to the router via Ethernet cable and set it up as a wired camera.

**Note:** Ensure the power switch is on for the camera, except for Reolink Go, Go Plus, and Go Ultra models.

## 2. Launch Reolink Client


- Open the **Reolink Client** on your computer and click the **+** icon to add a new device.
- Enter the 16-digit UID number of your camera and click **Add**.

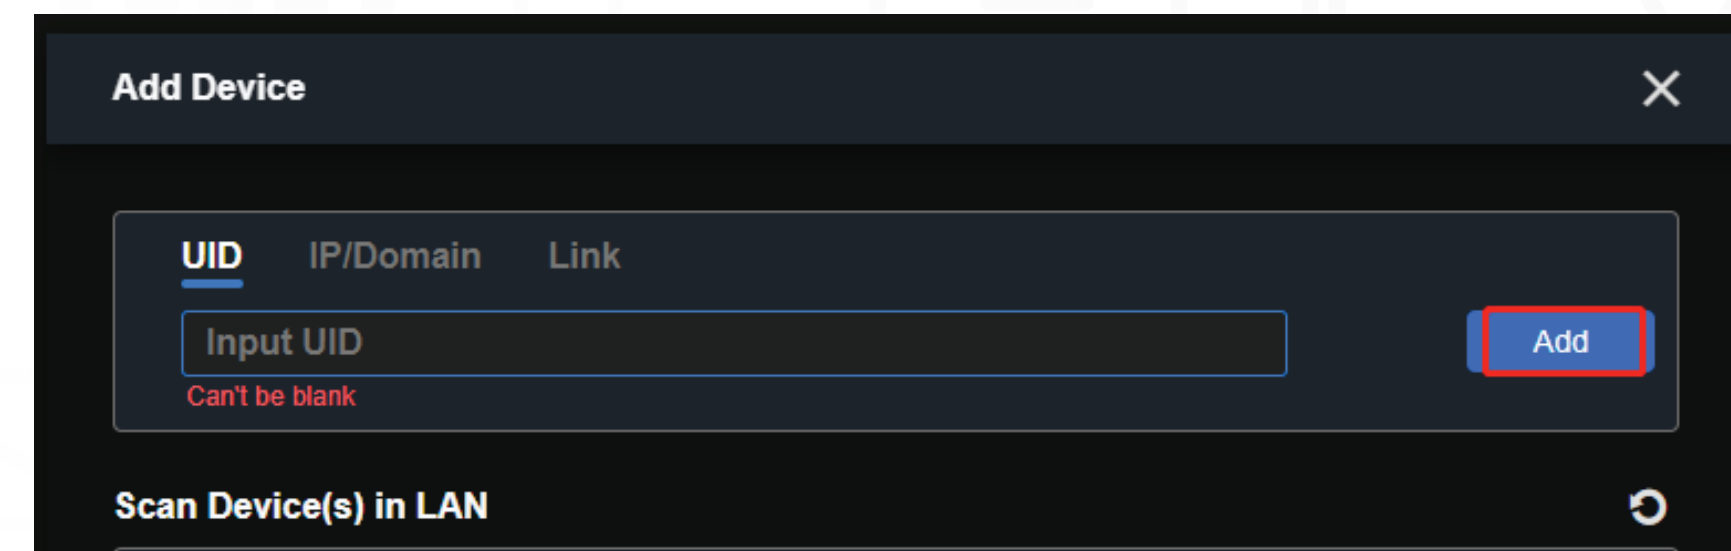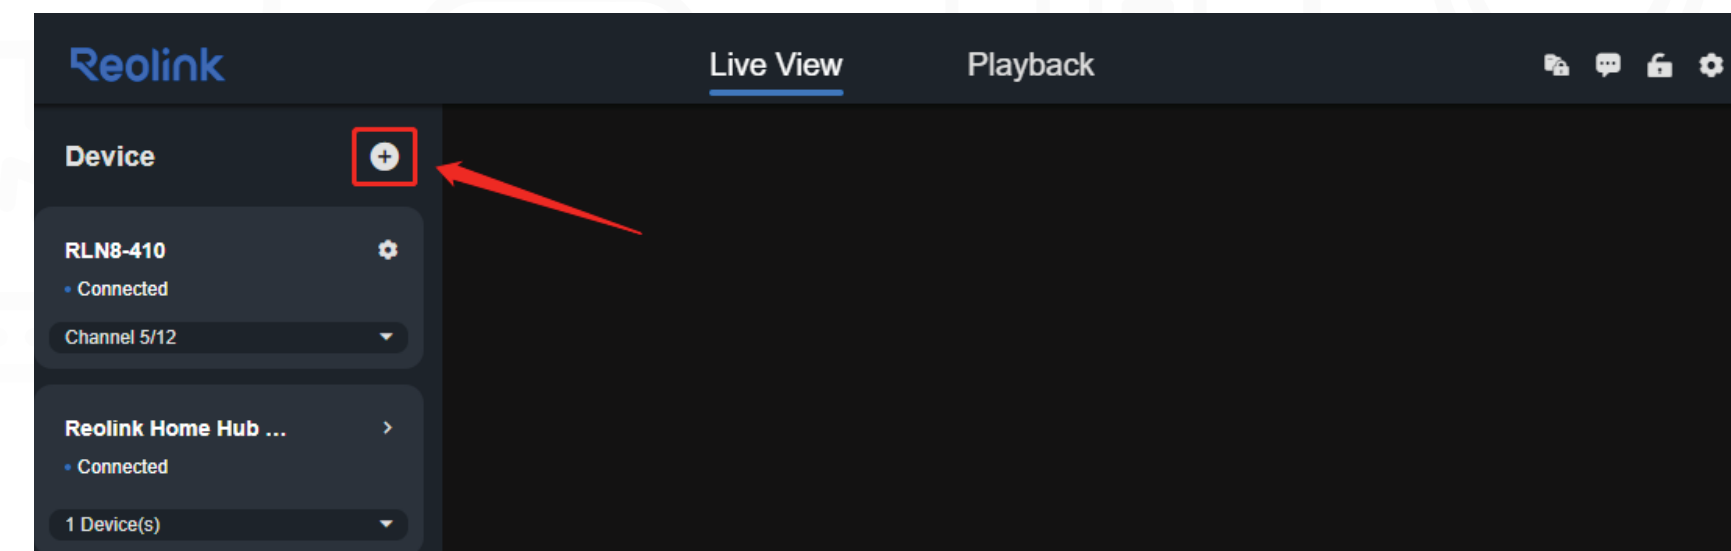

# Step-by-Step Setup:



### 3. Confirm Power-Saving Tip

- Read the power-saving tip if you're setting up a battery-powered camera, then click **Confirm**.

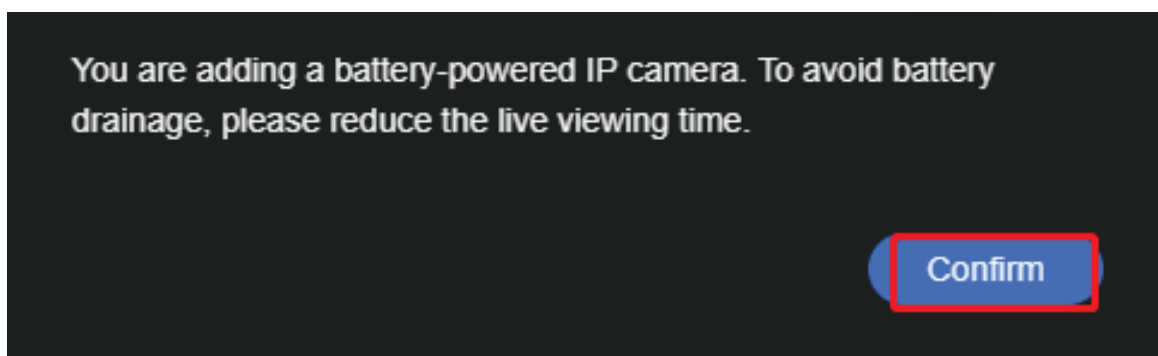

### 4. Create Login and Name the Camera

- Set up a login password for your camera and give it a name, then click **Next**.

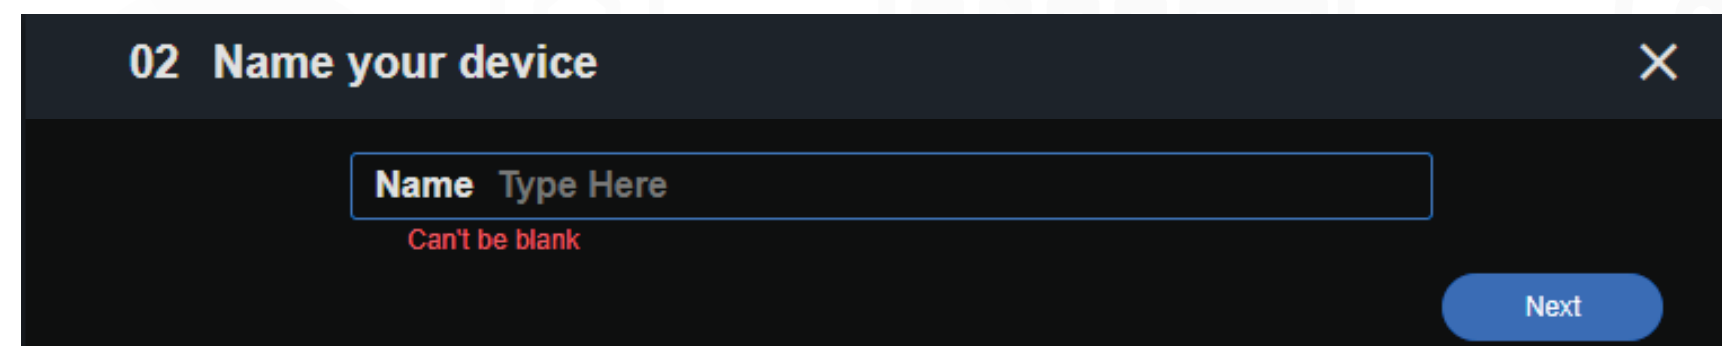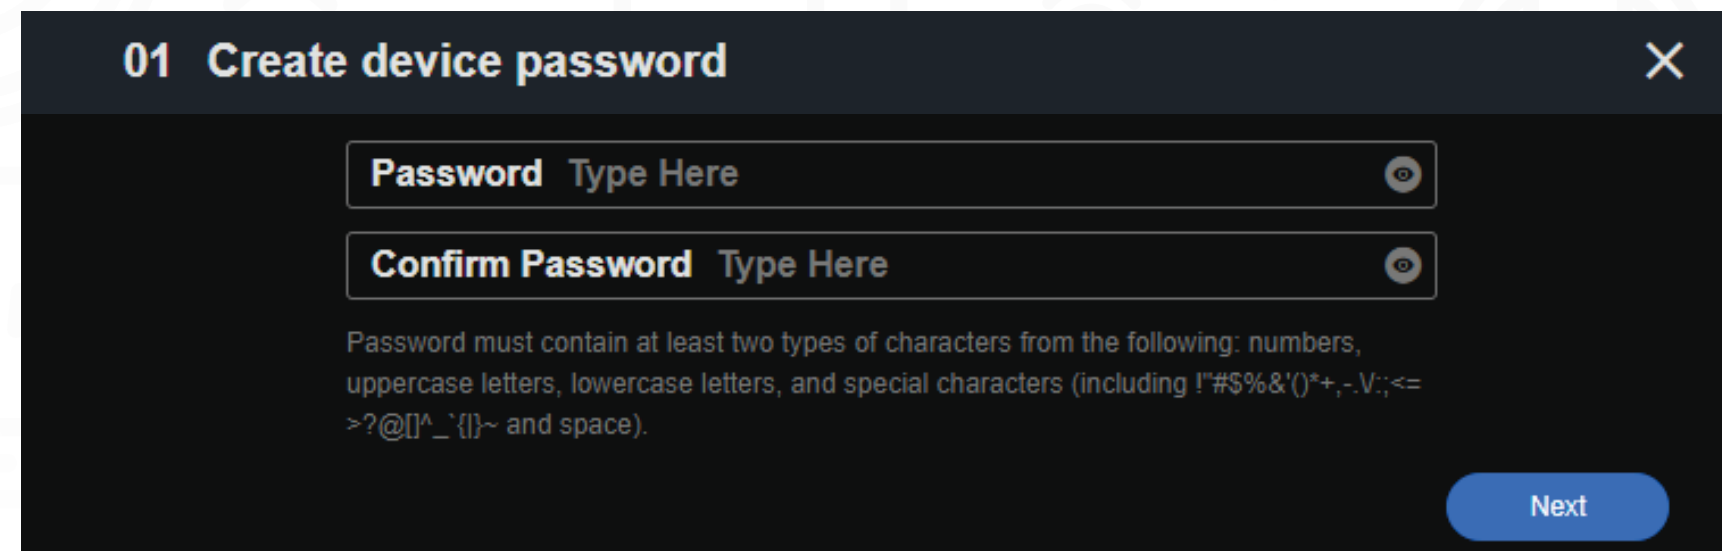


## Step-by-Step Setup:

### 5. Select a Scene (Optional)

- Choose a scene based on the camera's installation location, then click **Finish**.

**Note:** The scene selection option is available only for Reolink Go Plus, Go PT Plus, KEEN Ranger PT, and Duo 2 LTE models.

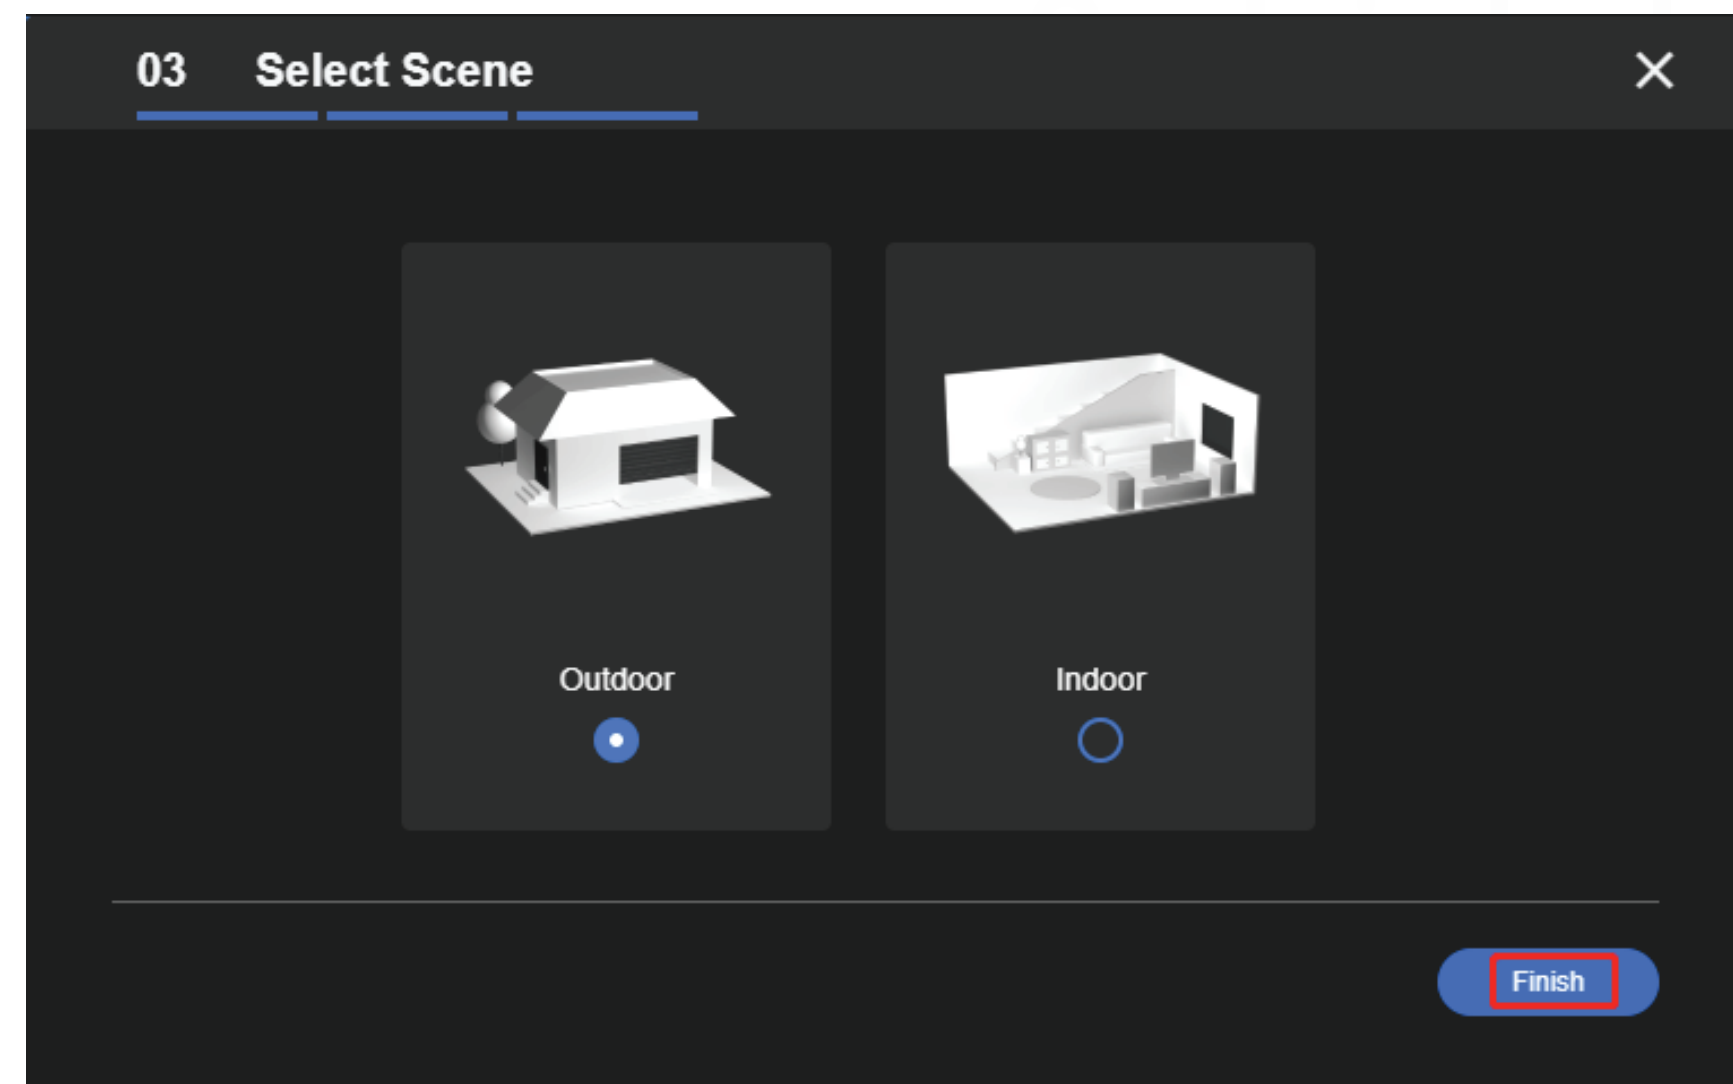

### 6. Complete Setup

- After finishing, you'll be directed to the **Live View** page of the camera.

